

Decorative wooden shutters

Art. 7046 / 7047 stainless supports

2024-1




Wooden shutters need ventilation between the outer wall and the back of the shutter. That is why supports are fitted in all four corners on the back. Each support has four slotted holes, so it can be adjusted. Two screws per support are enough. Mounting screws for timber façades are included. Note: For stone or rendered façades you need wall plugs, which are not included; the type depends on your façade.

Material:

- Supports: 45x30 mm, stainless steel A2 (AISI 304)
- Screws: 3.9x16 mm, stainless A2 (AISI 304)
- Mounting screws: M6x30 mm, stainless A2 (AISI 304)

Benefits:

- ◇ No drilling through the shutter
- ◇ No vulnerable holes
- ◇ Quick removal for maintenance
- ◇ The supports also act as spacers (10 mm)
- ◇ Secure, simple and concealed fitting
- ◇ Stainless material
- ◇ Clean front without screws or holes

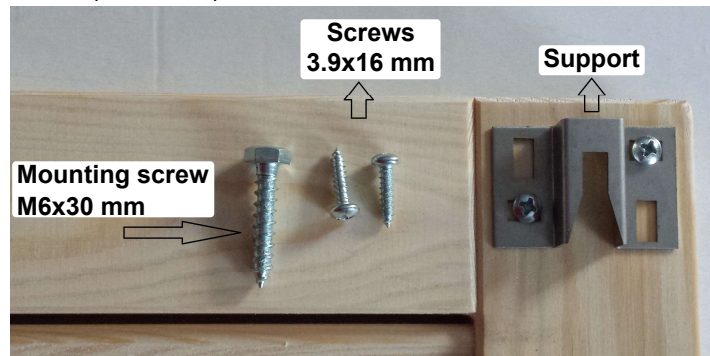

Back



Front

Description: 1 set per shutter, length up to 160 cm	Art. no. 7046	
Description: 1 set per shutter, length over 160 cm		Art. no. 7047
Stainless steel supports; 45 x 30 mm (w x l); thickness: 1 mm	4 pcs	6 pcs
Stainless steel screws; 3.9 x 16 mm	8 pcs	12 pcs
Hex mounting screws, stainless steel, for timber façades; M6x30 mm	4 pcs	6 pcs